



RESETTING SALES RESULTS:

Resetting daily sales results:

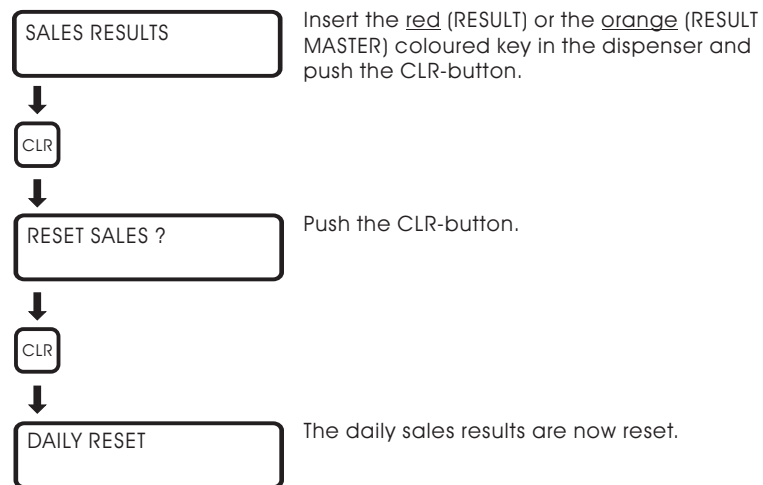

Resetting periodical sales results:

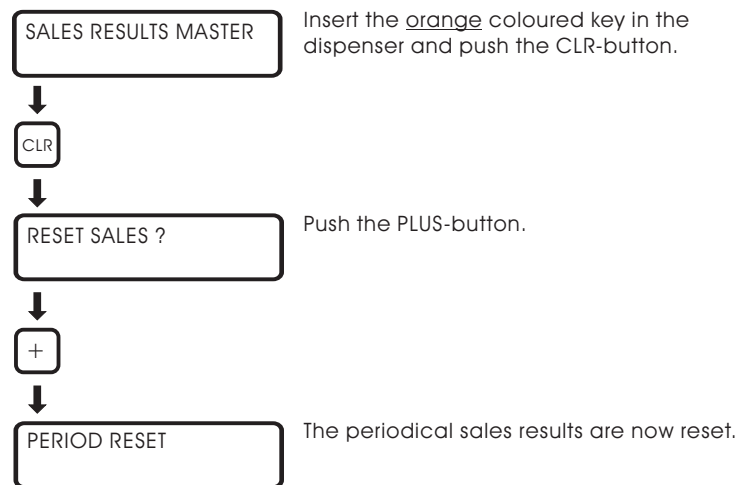

Manufacturer:

WWB DRINK SYSTEM AB
 Sepänkyläntie 212
 65610 MUSTASAARI
 FINLAND

Phone: +358-6-322 3074
 Fax: +358-6-322 3076
 info@wwbdrinksystem.fi
 www.wwbdrinksystem.fi

BCS-22 USER'S MANUAL REV 3.1a E

WWB
DRINK SYSTEM

SALES:

Sales key (blue):

INSERT KEY



SALE

Insert the blue sales key in the keyhole on the dispenser's right hand side to activate sales mode.

Portioning:

SALE

Choose product and portion size by pushing the button for either a large or a small portion of beer from line one or line two, and the dispenser will portion the selected portion.

Portion stop / Emergency stop



SALE



After the dispensing of the selected portion has been started (for example line 1 Small portion) it's possible to stop the dispensing by pushing the same portioning button once again.

The stopped portion will not be registered as sales !

Press one of the portioning buttons (for example line 1 large portion) to start the dispensing of the selected measure. The full portion will be dispensed (without registering the stopped portion).

Odd portion sizes / the fill-feature :



SALE FILL



The fill-feature enables the dispensing of odd portion sizes. By pressing and holding the PLUS-button the electric valve opens and beer is dispensed from line number 1. Release the button when the desired amount of beer has been dispensed. Use the MINUS-button to activate the fill-feature for line number 2. The text "FILL" will appear in the display when the feature is activated.

Empty Alarm:

SALE 1 EMPTY

If FOB detector is in use and connected to dispenser the empty alarm is displayed when the beer line is out of product. It is not possible to pour from the line where the empty alarm is displayed.

SALES RESULTS:

Sales key (blue):

Daily Small Large
12 00001 00023

Insert the blue sales key in the dispenser. Push the ENT-button. The dispenser now shows the sales of large and small portions. The word Daily indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the ENT-button.

Sales result keys (red and orange):

Daily Small Large
12 00001 00023

Insert the sales result key in the dispenser and push the ENT-button. The display now shows the daily sales of small and large portions. The word Daily indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the ENT-button.

Period Small Large
12 00001 00023

Insert the sales result key in the dispenser and push the PLUS-button. The display now shows the periodical sales of small and large portions. The word Period indicates from which line/lines the results are. The example display on the left indicates that line one and two are counted together. Browse through the results from the different lines by pushing the ENT-button.